



The E0010.10 alarm appears on Rika pellet stoves when the pellet hopper lid is open.

## Solution

1. Close the pellet hopper lid
2. Acknowledge the error message

If the alarm persists even though the lid is properly closed, and if the error reoccurs, a technician must be called.