
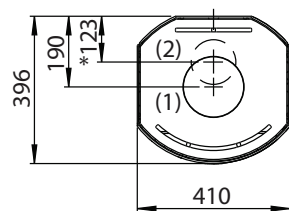



Fig. 1a

Jøtul F 130 Series



Jøtul F 134 (with base / without sideglases)

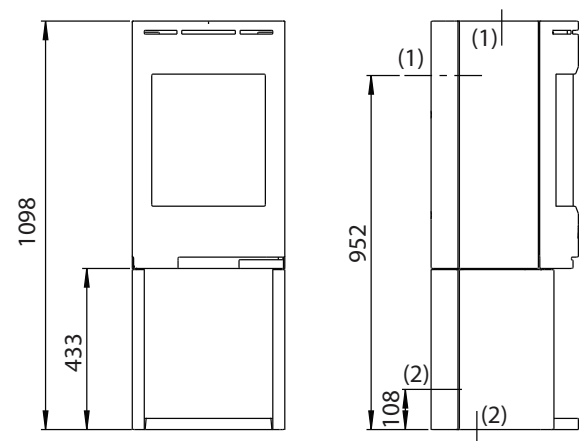

(1) - Flue pipe center
(2) - Outside air connection center

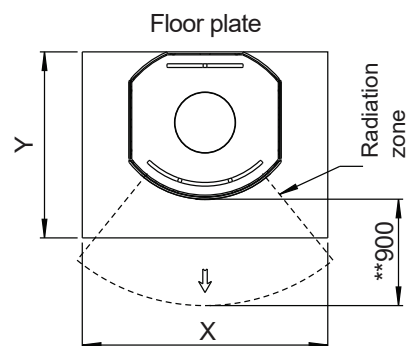



Jøtul F 136 (with pedestal without sideglases)

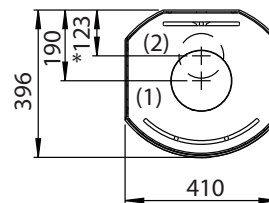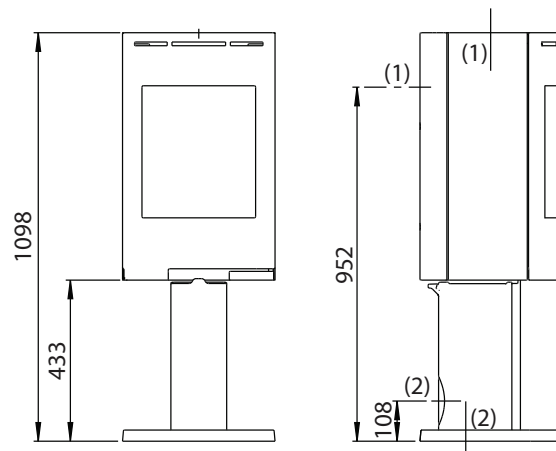

Min. measurements floorplate
X / Y= According to national laws and regulations

Combustible wall

Min. distance to combustible wall

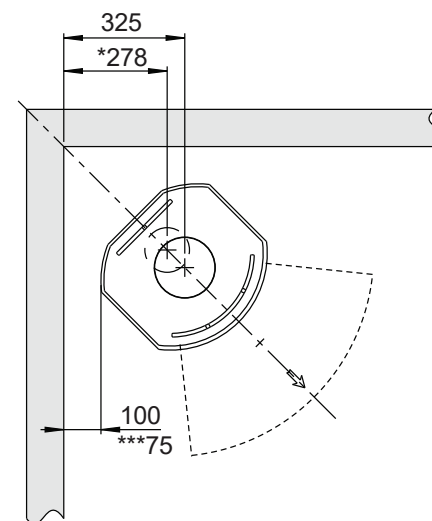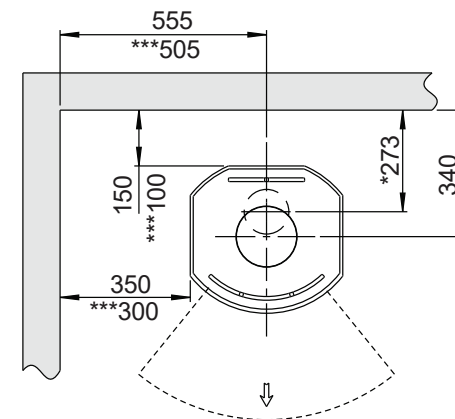

* Outside air connection

** Min. distance to furniture / combustible material


*** Distance to combustible wall with semi-insulated / shielded flue pipe

900189-P01


7

ENGLISH

External

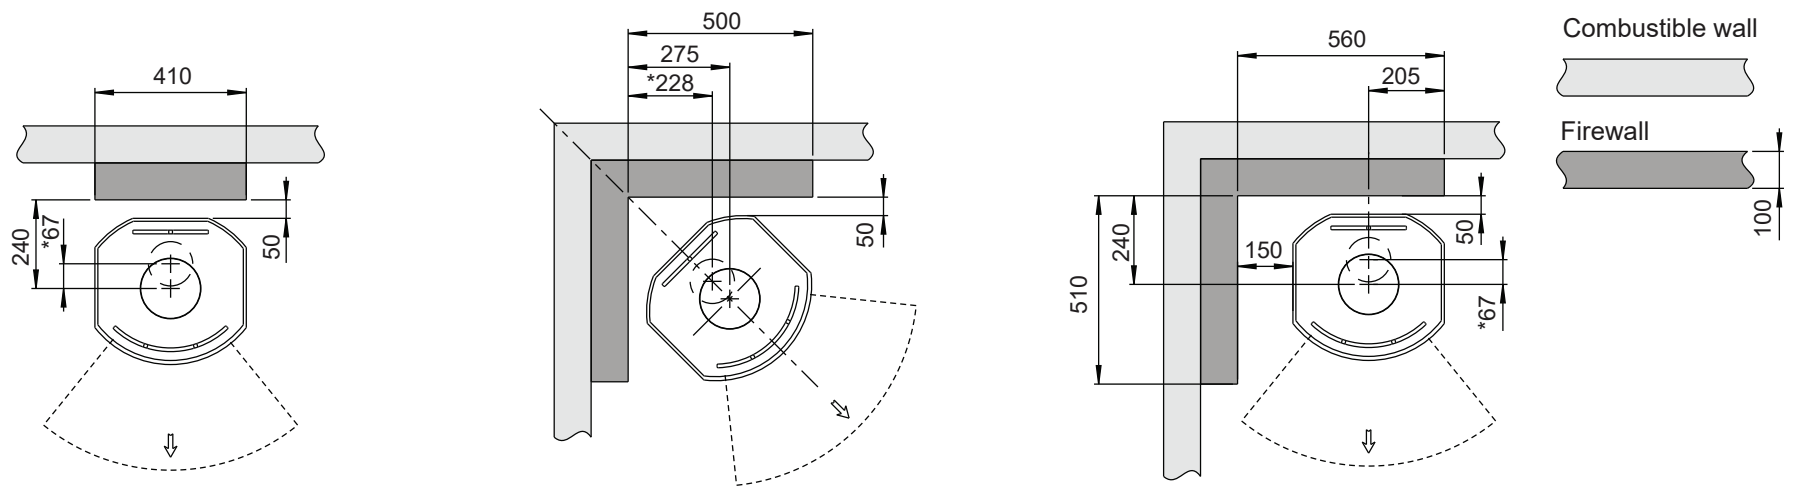

* External air supply

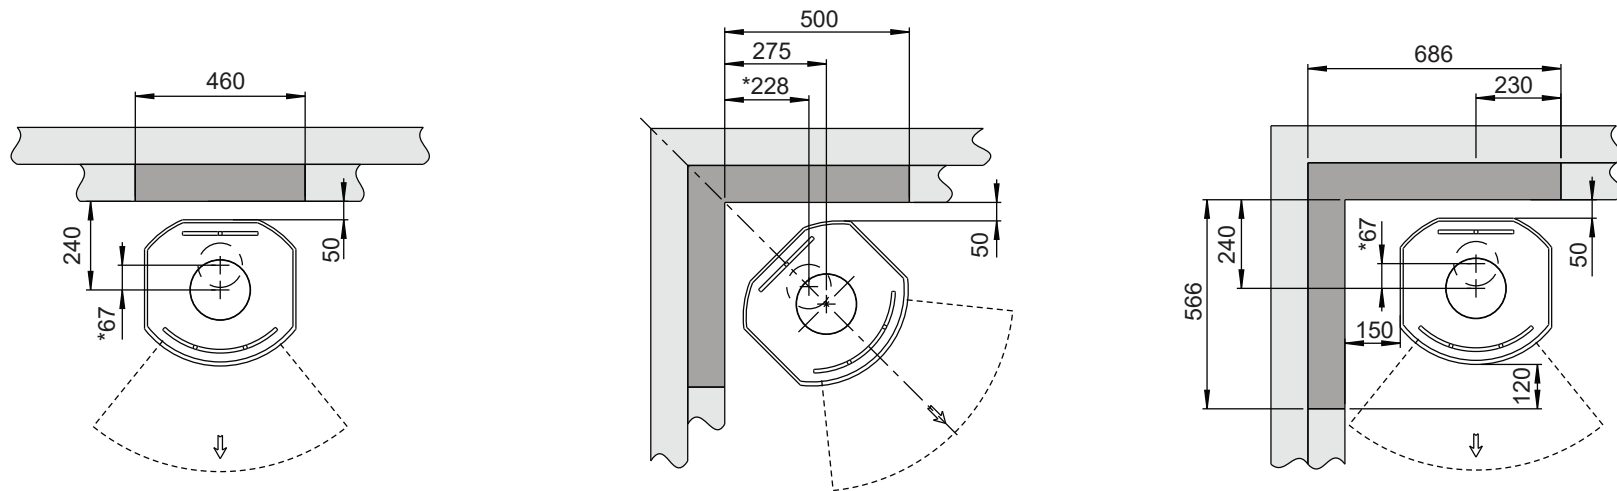


900189-P01



Fig. 1c

Jøtul F 130 Series



Jøtul F 135 (with base and sideglasses)

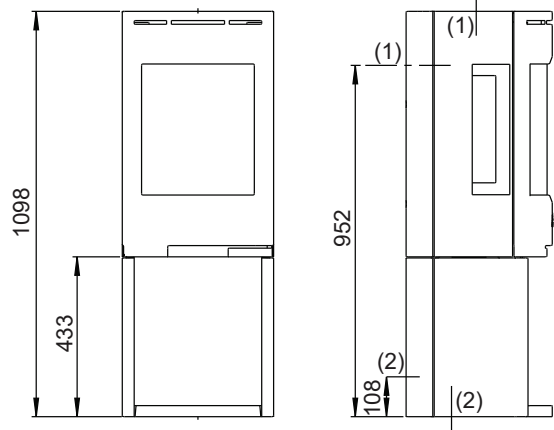

Jøtul F 137 (with pedestal and sideglasses)

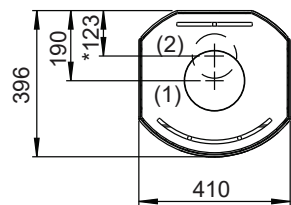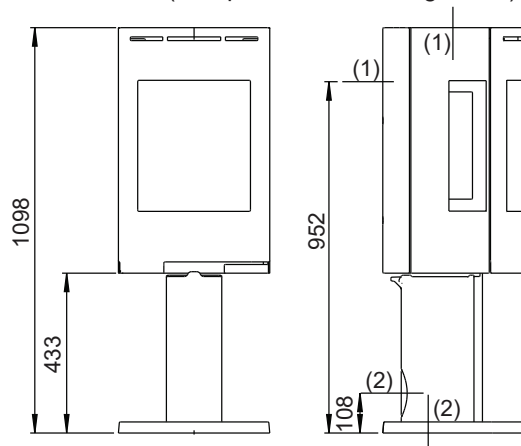

(1) - Flue pipe center
(2) - Outside air connection center

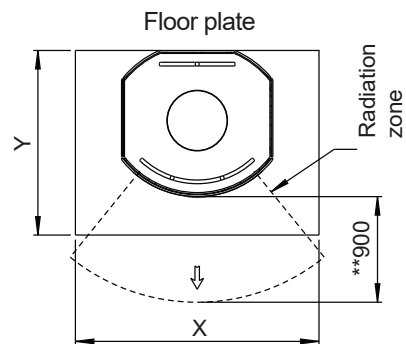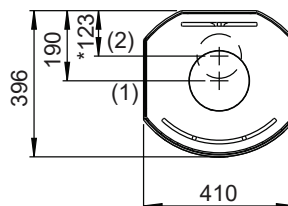

Min. measurements floor plate
X / Y = According to national laws and regulations

* Outside air connection

** Min. distance to furniture / combustible material

*** Distance to combustible wall with semi-insulated / shielded flue pipe

Combustible wall

Min. distance to combustible wall



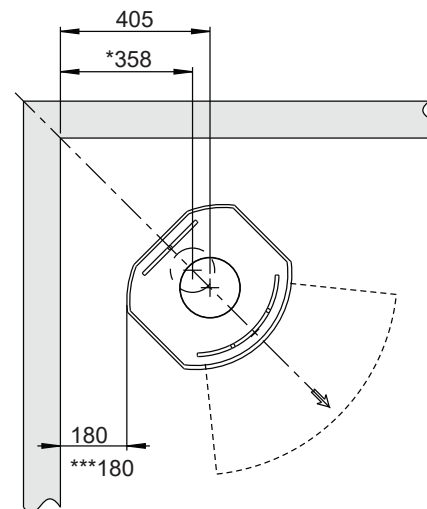


Fig. 1d

Jøtul F 130 Series

Jøtul F 135 / F 137 - min. distance to firewall

External

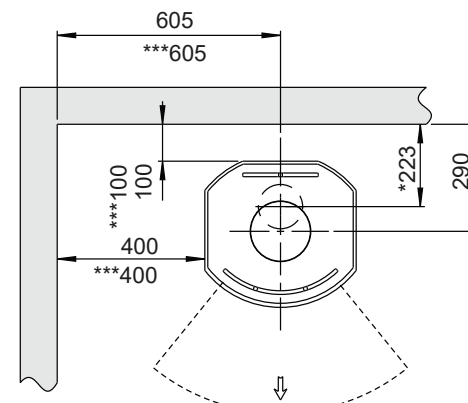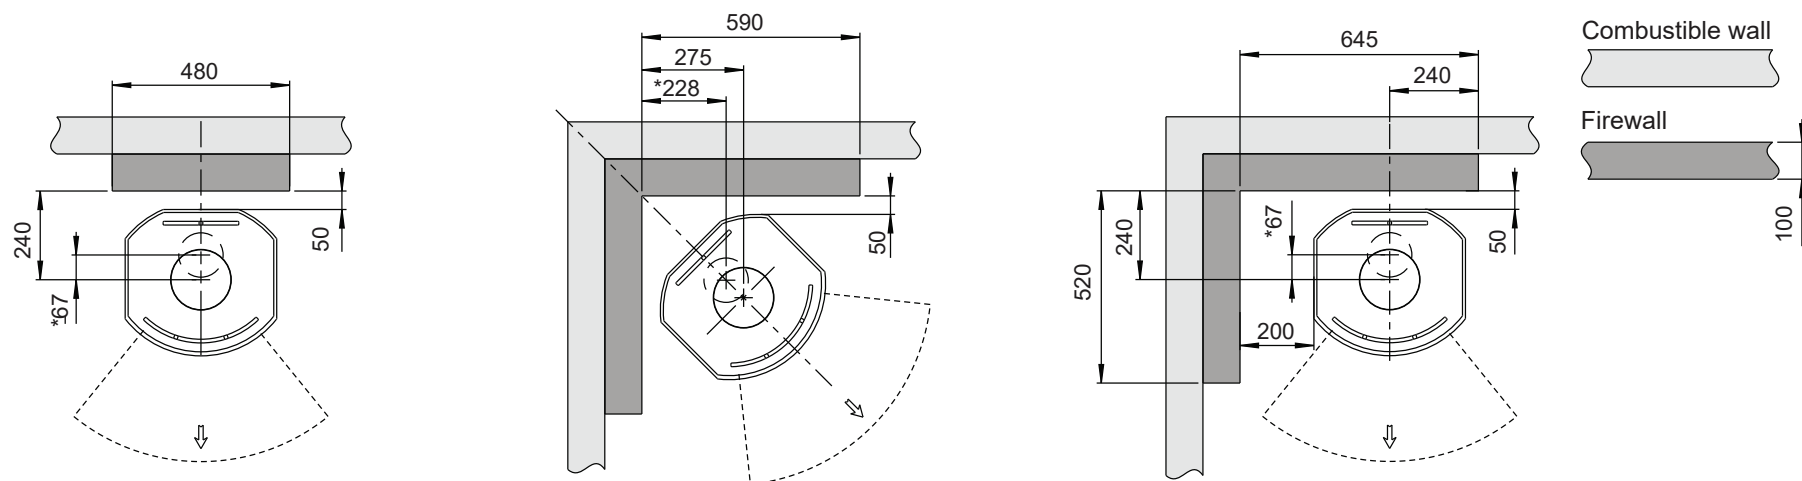

Integrated

